

To set up a Honeywell / Metrologic serial scanner for use with a Bluestore Live terminal, scan the following barcodes in sequence:

Recall Defaults



Enable RS232



Enable STX Prefix



Enable ETX Suffix



Enable Nixdorf Id Characters



Enable D/E Disable/Enable Commands



Enable LED brightness



Disable carriage return suffix



Disable line feed suffix

